

TOOLS REQUIRED

SUPPLIED

WARNINGS

To be assembled & dismantled by an adult. To be used on a flat surface.

Check all nuts are firmly tight and the frame assembly is securely located before use.

Ensure frame is securely pegged to ground before use.

Do not leave outdoors in adverse weather conditions.

Do not climb or hang from cross bar.


Check regularly for wear and tear, discontinue use if any breakage is found. Failure to do this may result in injury.


Check paintwork regularly, any signs of rust must be treated immediately.

Keep away from fire.

Keep away from heat sources.

WARNING! Not suitable for children under 3 years. Small part and long cord. Choking hazard and strangulation hazard.

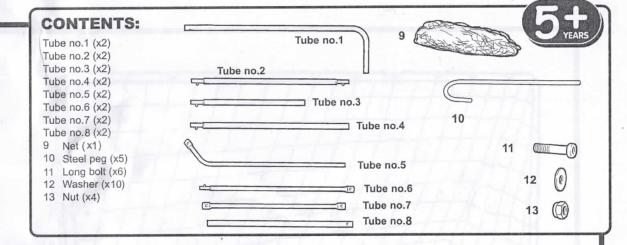

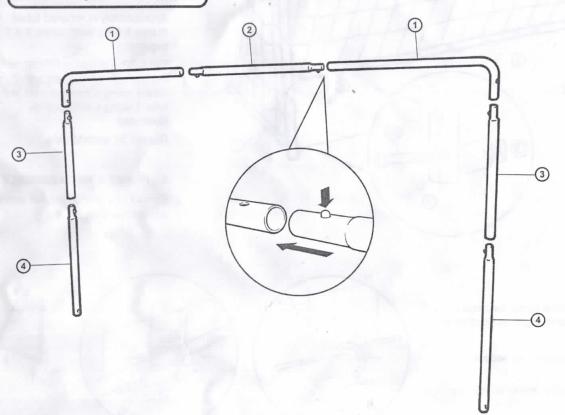

1 FRAME ASSEMBLY

Being careful to select the appropriately numbered tubes (tubes 1, 2, 3 & 4), assemble the frame as illustrated.

2 NET ASSEMBLY

Thread the net over the frame (tubes 1, 2, 3 & 4).

Remark: The red marker of net should be affixed at the top left corner of the goal.

